


LA-48

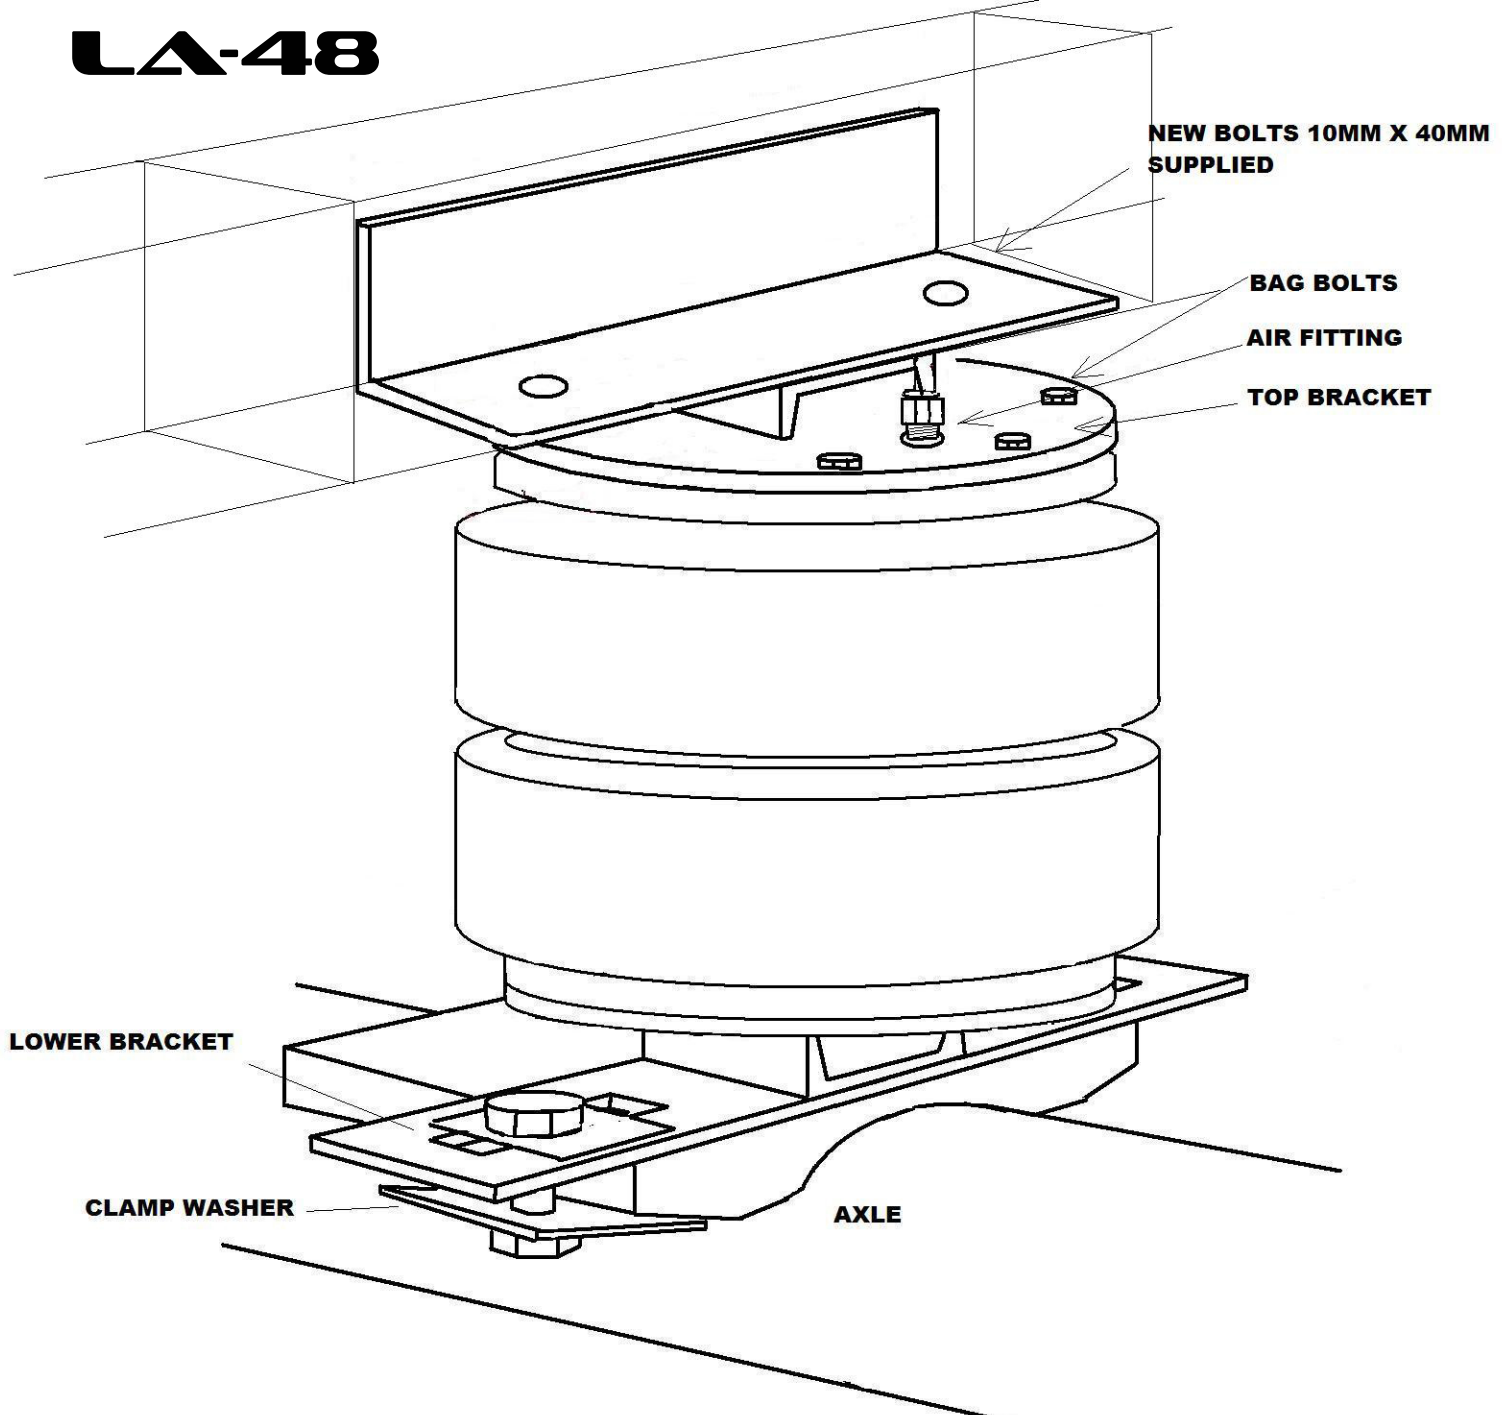

Chev GMC 88-99 2500-3500

1. REMOVE FACTORY BUMPSTOP.
2. ASSEMBLE AIRBAG KIT AS PER THE PICTURE. YOU CAN ROTATE THE BRACKET AND SILVER RING ON THE AIRBAG PRIOR TO TIGHTENING THE 6 BAG BOLTS FOR ALIGNMENT.
3. SLIDE THE BAG ASSEMBLY INTO PLACE AND INSTALL TOP BOLTS AND LOWER CLAMPS. CAREFULLY CUT AIRLINE TO LENGTH AND INSTALL SCHRADER PANEL.
4. PUSH AIRLINE FULLY INTO AIR FITTINGS AND PULL ON LINE TO ENSURE THE SEAL.
5. ZIP TIE ALL LINES TO SECURE

PLEASE NOTE THE AIRBAG CANNOT RUB ON ANYTHING, IF YOU FEEL THE BRACKETS ARE INCORRECT PLEASE CONTACT BY EMAIL:



5/132 Brisbane Road
Labrador QLD 4215
AUSTRALIA
Ph 1300 855 161
Email info@bossairsuspension.com.au